

SAFL Baffle Operation & Maintenance Manual

For NJDEP Certified SAFL Baffle Installations

Operation

The SAFL Baffle is a stainless-steel baffle installed in a concrete structure to capture sediment from stormwater runoff. Once installed, the SAFL Baffle requires maintenance to perform properly.

Maintenance

1. Visual Inspection - Three times per year for first two years, once per year following
2. Sump Cleaning - Once per year, unless visual inspection indicates more frequent cleanings required

Tools Needed

1. Vacuum truck with jet power washer
2. Measuring tape with attached flat disk
3. Rake or broom

Visual Inspection

Visual inspection needs to take place to ensure the SAFL Baffle is functioning properly and should take place 3 times per year for the first two years.

1. Previous Inspections – When was the last time this structure was inspected?
2. Access - Is the structure accessible? If not, remove obstruction.
3. Debris - Is trash or vegetation in the structure? If so, what types of trash or vegetation are present? Is there so much debris that it is difficult to see water? If so, sump cleaning is required
4. Structural Integrity - Push and pull on top of Baffle to insure it is still solidly anchored to the walls. Are there pieces of the Baffle that have become dislodged? Do any parts of the Baffle appear weak, damaged or loose? If so, retighten as needed. If parts are needed, contact Upstream Technologies at 651-237-5123
5. Clogging - Is anything clogging the baffle? If so, what is causing the clogging? Attempt to remove debris stuck to the Baffle with a rake or broom.
6. Sediment Accumulation –Several measurements should be taken to generate an average sediment depth. If average sediment depth is more than 18 inches above the sump floor, the sump needs to be cleaned out. Sump depth is measured from the pipe invert to the sump floor.

Sump Cleaning

Sump cleaning needs to take place to ensure maximum capture of sediment from stormwater and should be performed at minimum, once per year. The structure may need more frequent sump cleaning if sediment is consistently accumulating to more than 18 inches above the sump floor.

1. Vacuum water, debris, and sediment
2. Jet wash debris from Baffle
3. Jet wash any remaining debris and sediment towards vacuum hose